

Bayliss Precision Components Ltd

Replacement Instructions For XL Power Tubes

Step 1.


Turn black swivel block until the brass adjuster faces outwards.

Step 2.

Thread the protruding piston rod between the black swivel block and the spring.

Step 3.

Hold the unit open and pull the Tube Socket* into its upright position.

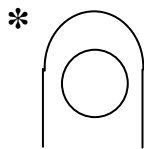

Step 4.

Push the tube Socket over the Power Tube.

Step 5.

Thread the Tube Clip through the cross hole of the Tube Socket (Note: The circular section of the tube clip will sit on top of the Tube Socket.)

